

Troxler Electronic Laboratories, Inc.

Troxler PlusLoader Software License

Instructions, Installing and Activating the Software



Troxler Electronic Laboratories, Inc.

3008 Cornwallis Rd. • P.O. Box 12057

Research Triangle Park, NC 27709

Phone: 1.877.TROXLER

Outside the USA: +1.919.549.8661

Fax: +1.919.549.0761

www.troxlerlabs.com

The price for Troxler PlusLoader software license has been set up successfully for your account. Please follow the instructions mentioned below to purchase the license.

Instructions

- Login to the account from which you have requested for the price.
- Instead of 'Request Price' button, product price and Add to Cart button is displayed.
- Click on Add to Cart.
- Remember that you cannot order more than 10 license quantity in a single order. (Here Quantity = Use. A "Use" consists of one successful upload of calibration constants into the gauge)
- Also, no other product can be ordered along with Troxler PlusLoader Software License.
- Click on 'Secure Checkout' and place the order after entering the Billing Address and selecting appropriate payment mode.

Note: If you opt for 'Pay Later' payment option, additional surcharge will apply.

Installing the Troxler PlusLoader software license

The Troxler PlusLoader program must be installed, and then activated, before it can be used to load calibration constants into a Troxler gauge.


- Once the purchase is complete, Troxler will provide you with a link to the installation application for the program. (Check your Email for the download link)
- Download this application from the provided link.
- Run the installation program.
- When the installation is complete, go to the "Troxler PlusLoader" program group in Windows and double-click the "Troxler" icon.
- When the Troxler PlusLoader program loads for the first time, the following screen displays.



* The actual software version may vary from the screenshot.

Activating the Troxler PlusLoader software license

- Enter the License ID and Activation Password you received from Troxler in the spaces provided on the Activation Screen.
- Once you enter the License ID and Activation Password, click on the “Activate” button on the screen and the software activates.

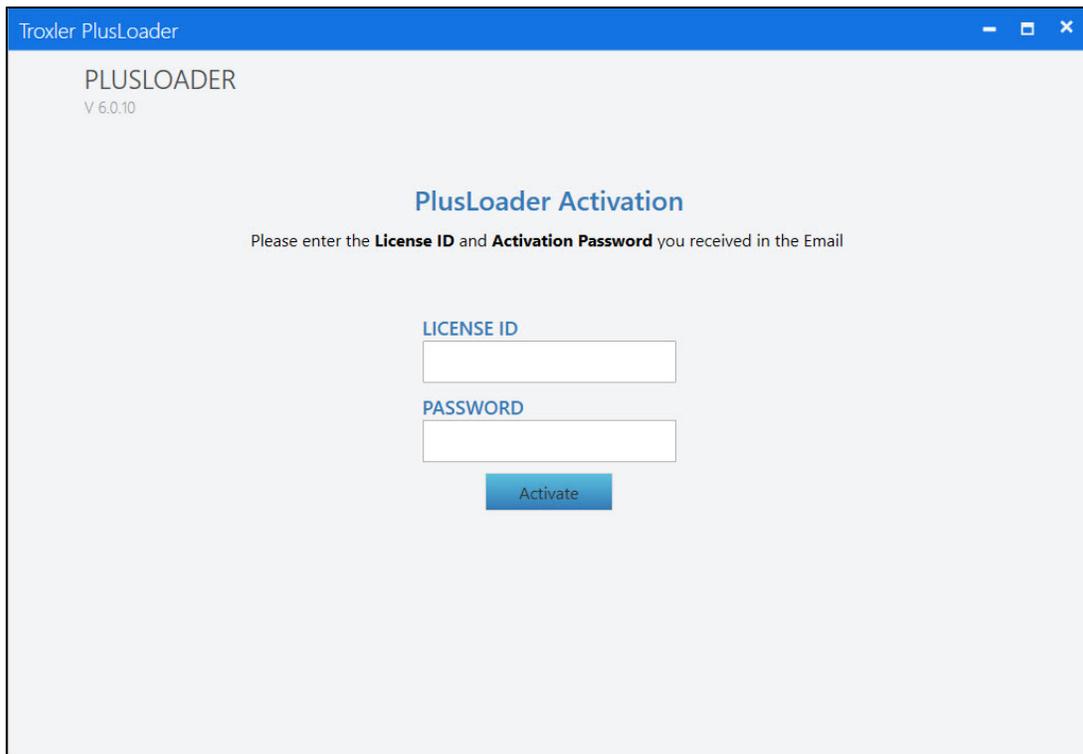

The screenshot shows a window titled "Troxler PlusLoader" with a blue header bar. Inside the window, the text "PLUSLOADER V 6.0.10" is displayed in the top left. The main heading is "PlusLoader Activation" in blue. Below it, a message reads: "Please enter the **License ID** and **Activation Password** you received in the Email". There are two input fields: the first is labeled "LICENSE ID" and the second is labeled "PASSWORD". Below these fields is a blue button labeled "Activate".

* The actual software version may vary from the screenshot.